


RADIOSHACK SPEAKER/MICROPHONE No. 19-314

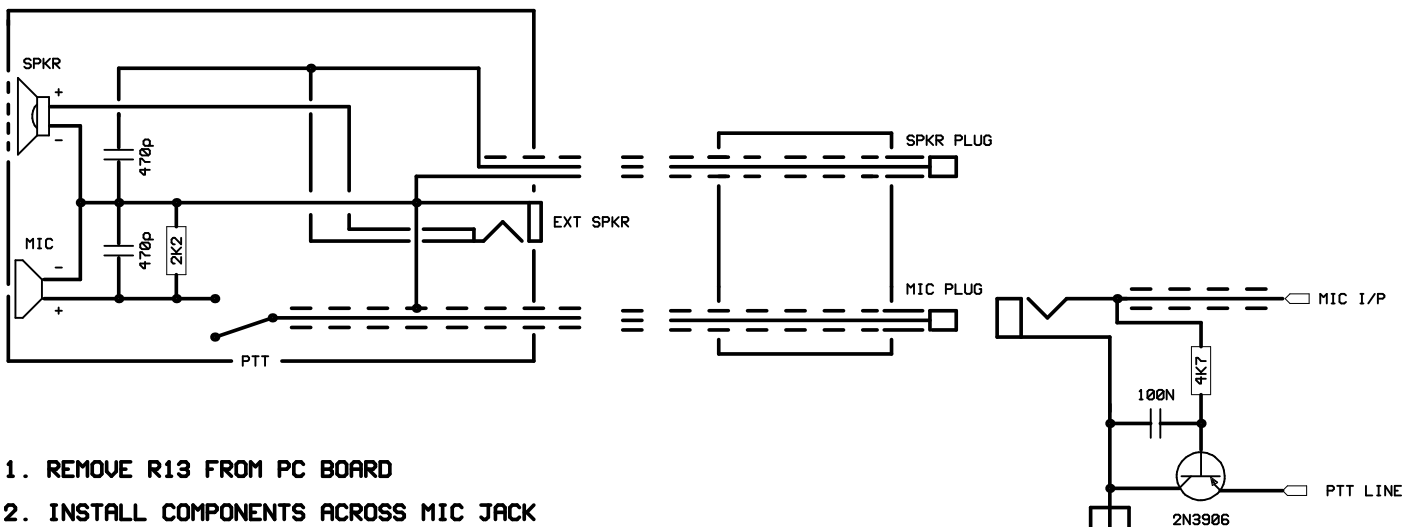

1. REMOVE R13 FROM PC BOARD
2. INSTALL COMPONENTS ACROSS MIC JACK